

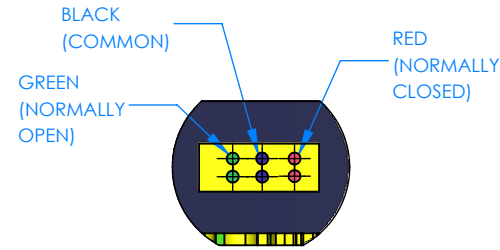
 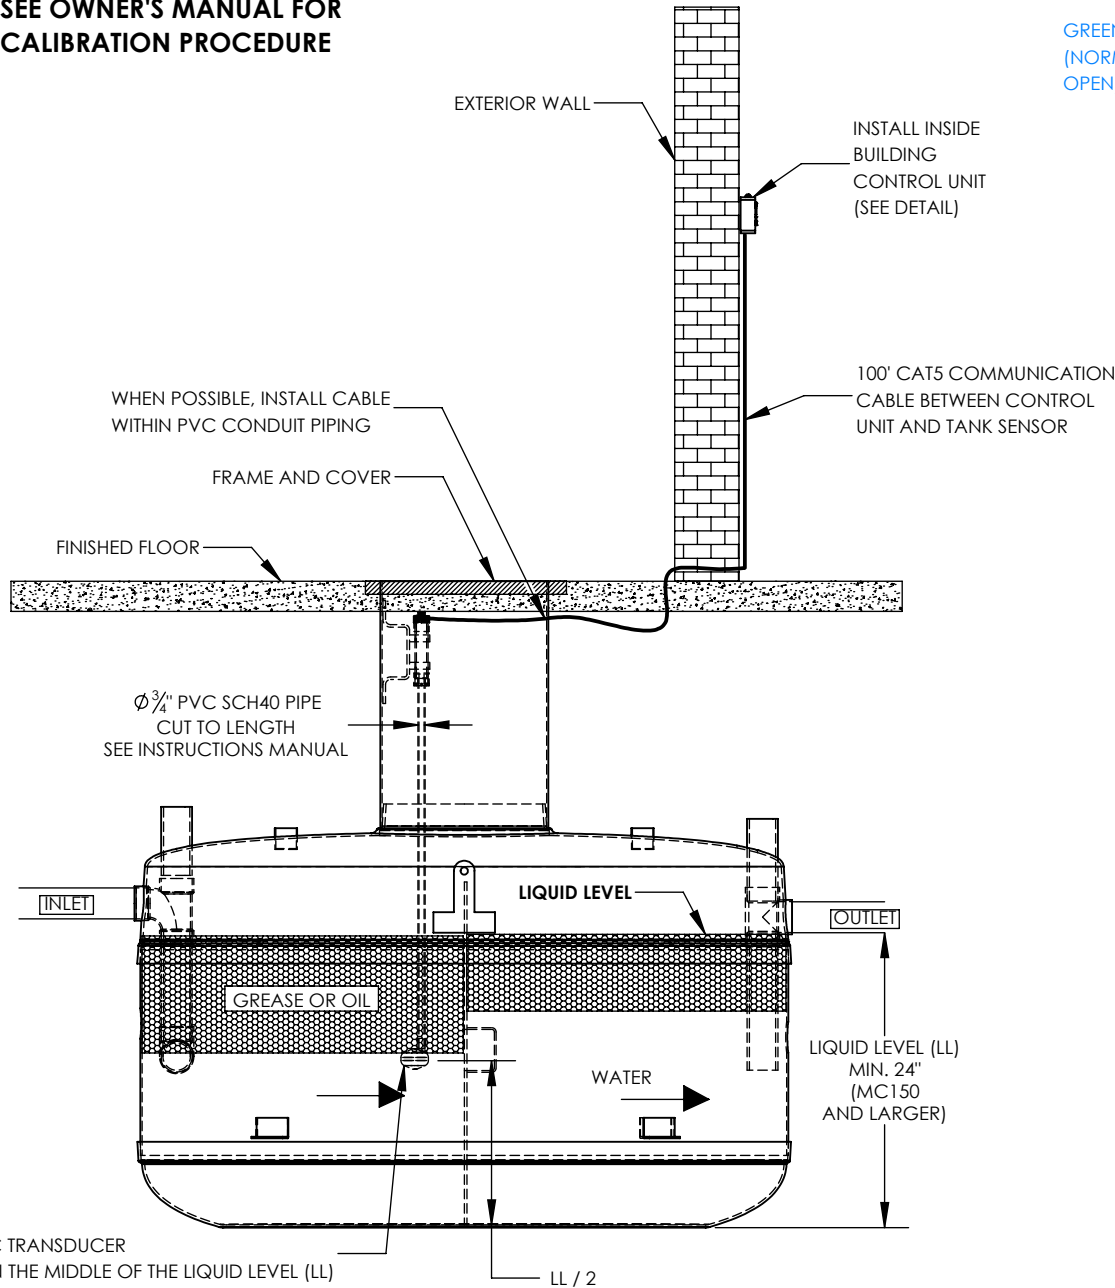


**SEE OWNER'S MANUAL FOR CALIBRATION PROCEDURE**

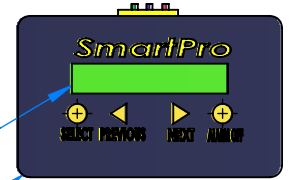


DETAIL A  
SCALE 1 : 2  
BUILDING AUTOMATION  
ALARM OUTPUT

LCD DISPLAY OF  
TANK CONDITIONS  
ALARM MONITOR  
INCLUDES AUDIBLE  
AND VISUAL ALARM



CONTROL UNIT

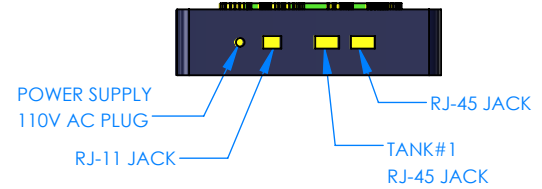

PLUG TRANSDUCER CABLE INTO TANK #1 RJ-45 JACK

ULTRASONIC TRANSDUCER  
INSTALLED IN THE MIDDLE OF THE LIQUID LEVEL (LL)

1. TANKS INSTALLED IN SERIES (EX. GMC 2000(2)) WILL HAVE ALARM INSTALLED IN THE FIRST TANK OUTLET SIDE
2. SINGLE TANKS (WITH BAFFLE) WILL HAVE ALARM INSTALLED ON THE INLET SIDE (BOTH INLET AND OUTLET INSTALLATION IS ALLOWED BUT GT RECOMMENDS INLET)

ALARM IS SHOWN TO BE INSTALLED  
ON INLET SIDE OF TANK

**SKU 4640**  
**INTERNAL PART #G2-4621**

DWG. TITLE:  
SMARTPRO WIRED  
ALARM G2 INLET SIDE  
INSTALLATION

PROJECT:

SIZE  
A

DRAWING NOT TO SCALE



DWG #: **21-5527-S** REV. 0