





ZPD1

ZURN POD PRO® SHALLOW FLOOR DRAIN WITH CLAMPING FRAME AND DROP-IN OUTLET INSTALLATION INSTRUCTIONS



Design and Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

Drain Installation

1. Cut 5 1/2" [13.9.7 mm] max diameter hole into flooring where floor drain is required and clean flooring of any dirt or debris.
2. Secure body to flooring with screws or construction adhesive (supplied by others).
3. Install waterproofing per manufacturer's instructions. Ensure membrane lays fully flat and is properly sealed to body.
4. Cut 4 small holes for frame screws into membrane and add a drop of silicone over each hole.

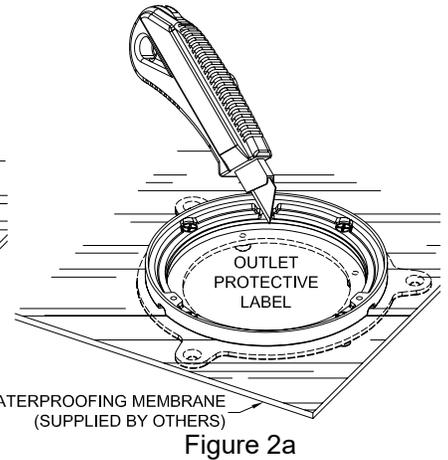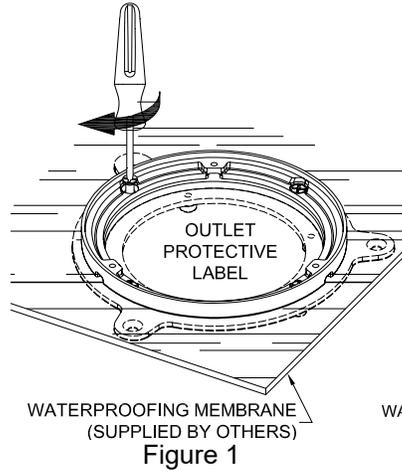

5. Place frame onto membrane, aligning holes in frame with body. Using frame screws from bag labeled "A", tighten screws to 20-25in-lbs [2.3-2.8 N-m]. See Figure 1.

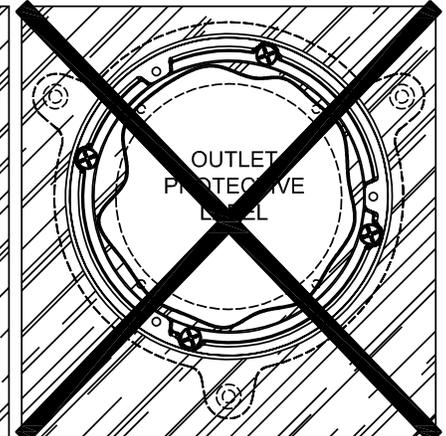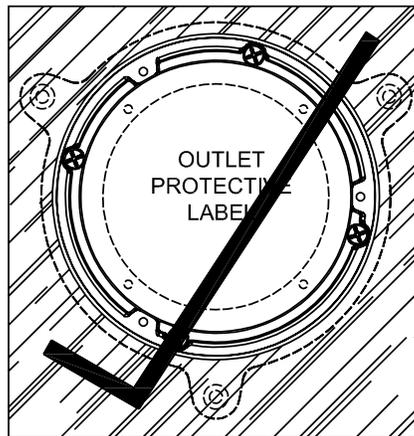



6. Cut membrane by using inside edge of frame as guide. Reference Figure 2a.

Note: DO NOT CUT SEALING SURFACE OF BODY WHERE OUTLET PROTECTIVE LABEL IS APPLIED.

- a. Ensure no waterproofing is overhanging edge of body for outlet seat.

Reference Figure 2b and 2c.

7. Place strainer into frame and using strainer screws from bag labeled "B", tighten screws to 20-25 in-lbs [2.3-2.8 NM]. See Figure 3.

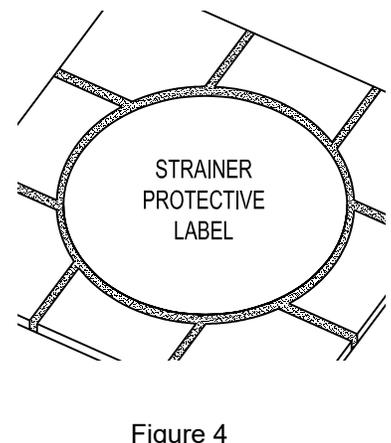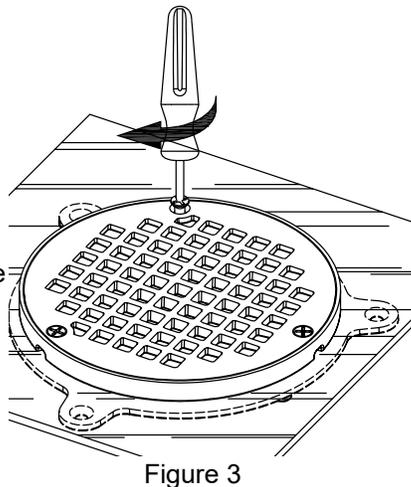

8. Remove backing from strainer label and place onto strainer/frame, ensuring the label is not overhanging the frame edge.

9. Install finished flooring. See Figure 4

10. Place outlet box in POD for shipping or palletize as necessary.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev.	C
Date:	11/25/2022
C.N. No.	144898
Patent	zurn.com/patents
Prod. Dwg. No.	FD133
Page 1 of 2	



ZPD1

ZURN POD PRO® SHALLOW FLOOR DRAIN WITH CLAMPING FRAME AND DROP-IN OUTLET INSTALLATION INSTRUCTIONS

Design and Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

Outlet Installation

Note: Ensure steps 1- 8 of Drain Installation are completed before continuing.

11. Once POD is set in place at job site, open outlet box and remove components.
12. Remove strainer label and discard.
13. Remove strainer, set screws aside. Ensure not to drop screws down the drain. See Figure 5.
14. Remove outlet protection label and discard.
15. Place gasket on body with rib facing up, aligning holes, ensuring gasket lays flat with no wrinkles. See Figure 6a, 6b, and 6c.
 - a. Do not use additional sealant.
16. Cut outlet pipe to required length prior to installing into drain. Ensure all sharp edges are deburred.
17. Place outlet on gasket, carefully align holes ensuring not to tear gasket.
18. Start threading all 4 outlet screws from bag "C". See Figure 7.
19. Once all screws are started, in a star pattern torque to 20-25in-lbs [2.3-2.8 N-m].
20. Place strainer back into frame, reinstall screws and tighten to 20-25in-lbs [2.3-2.8 N-m]. See Figure 8.

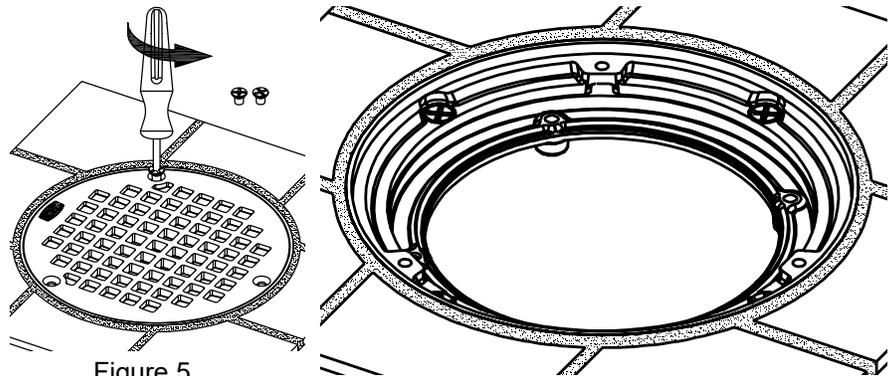


Figure 5

Figure 6a

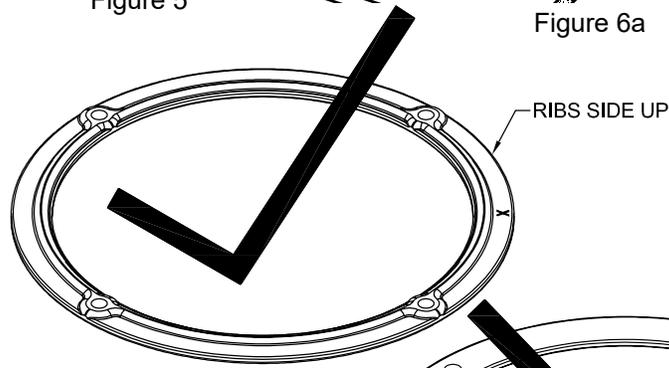


Figure 6b

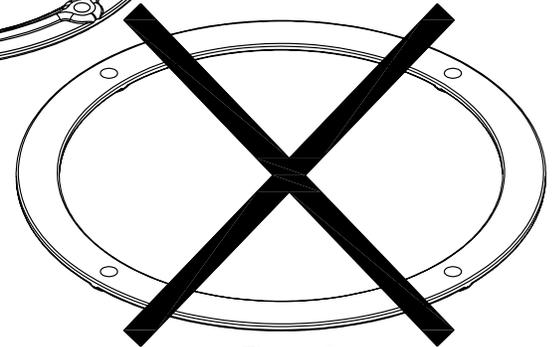


Figure 6c

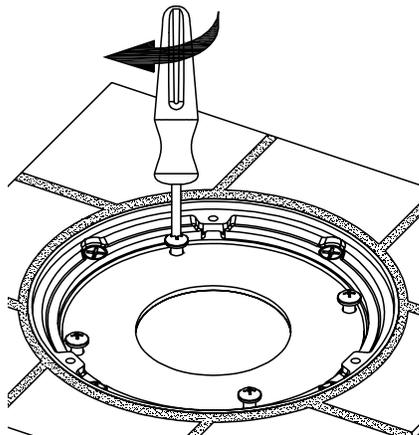


Figure 7

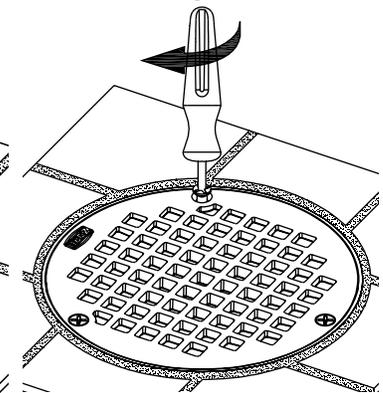


Figure 8

- WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov
- ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov
- AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Specification Drainage Operation
1801 Pittsburgh Avenue, Erie, PA 16502, Ph. 855.663.9876

In Canada | Zurn Industries Limited
7900 Goreway Drive, Unit 10, Brampton, Ontario L6T 5W6, Ph. 877.892.5216

www.zurn.com

Rev.	C
Date:	11/25/2022
C.N. No.	144898
Patent	zurn.com/patents
Prod. Dwg. No.	FD133

Page 2 of 2